





FLEX







ELEKTROWERKZEUGE

IW 1/2" 750 18.0-EC

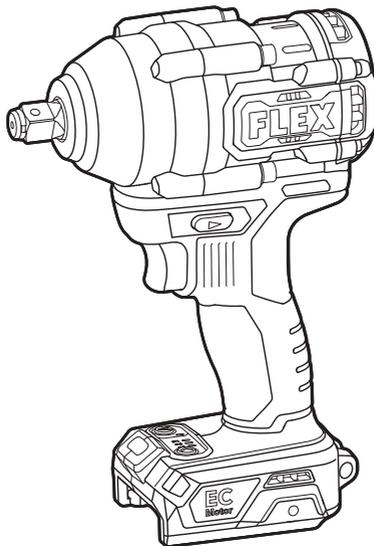


de	Originalbetriebsanleitung.....	6
en	Original operating instructions.....	14

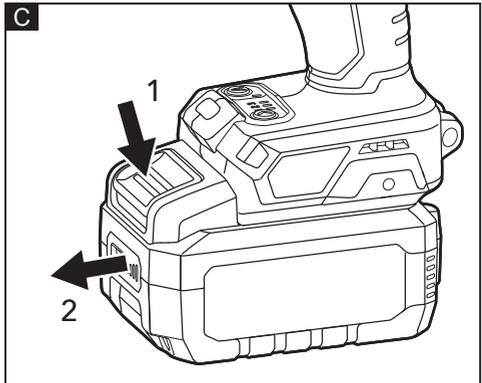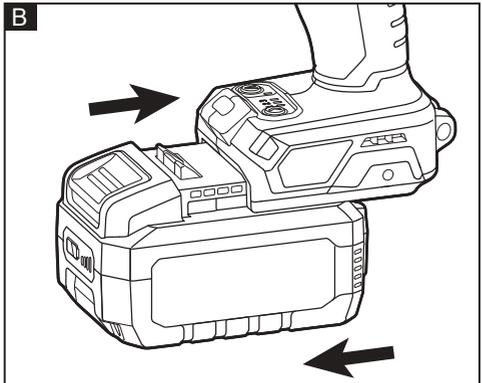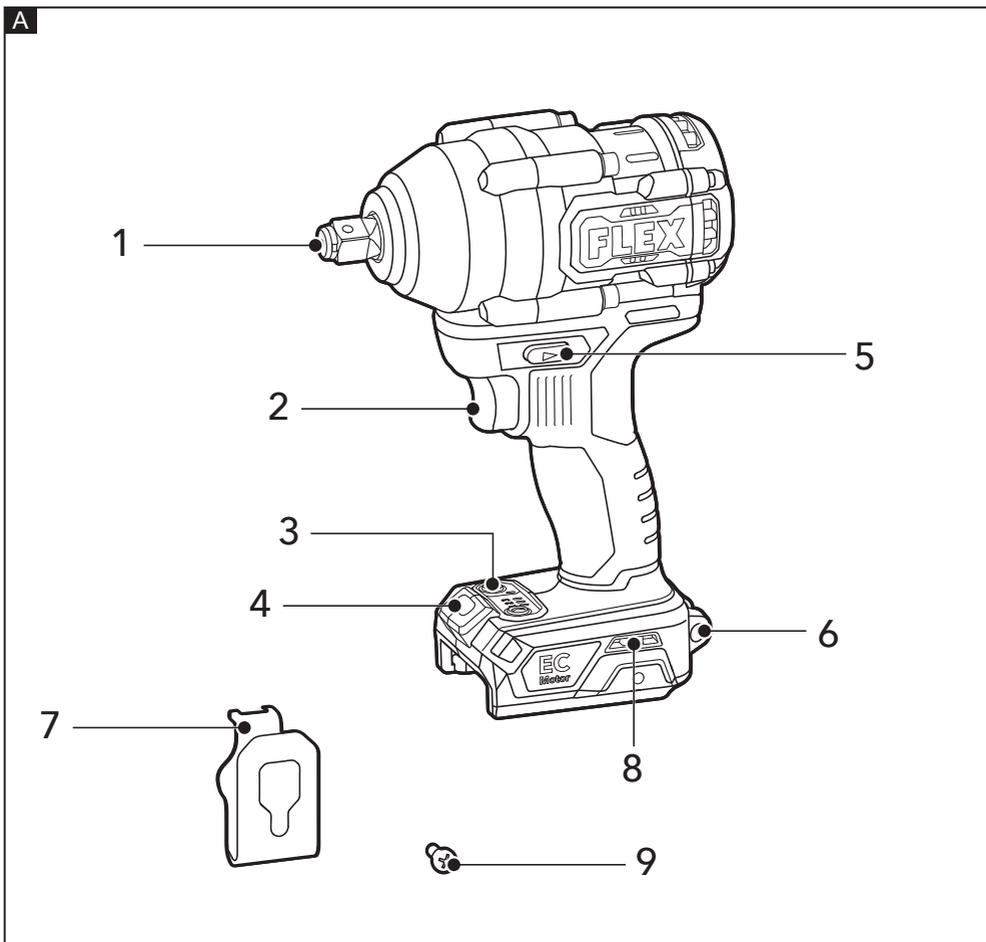


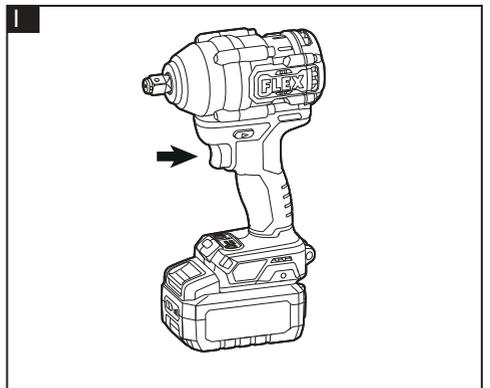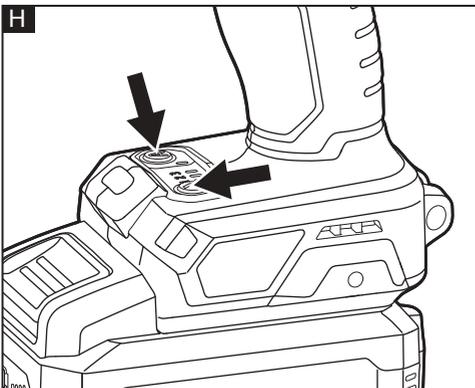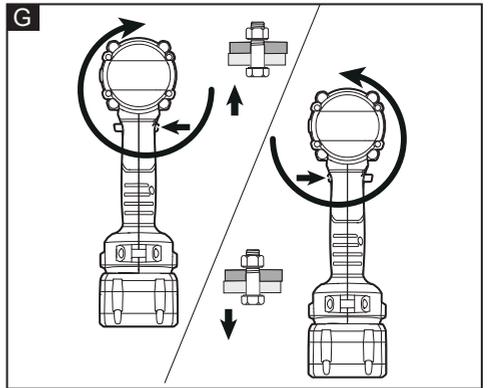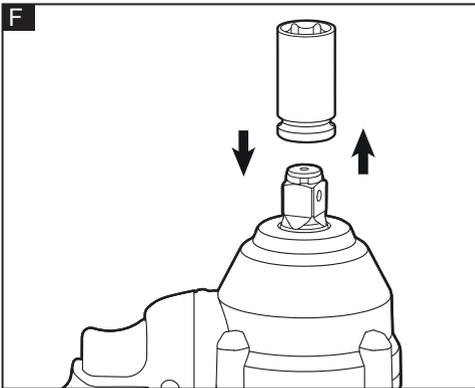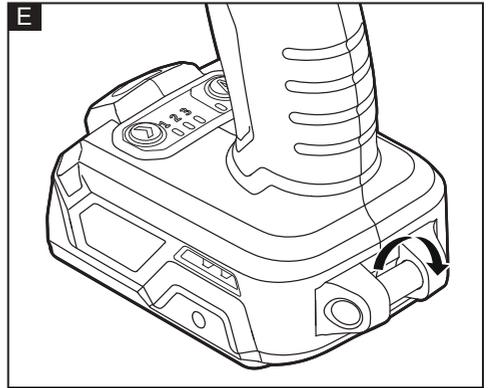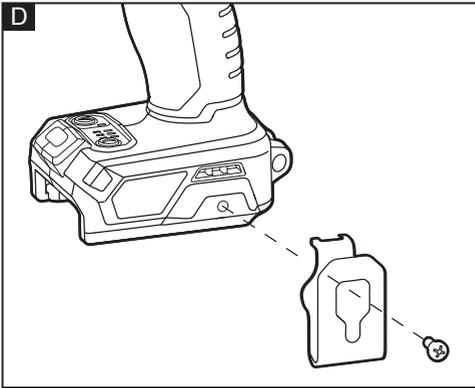

J

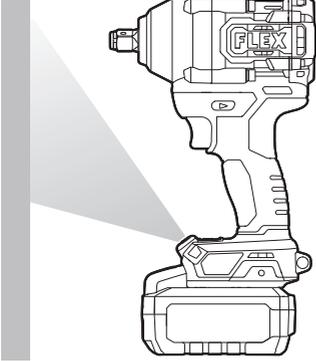

K

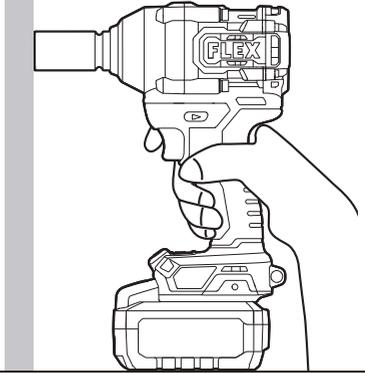

In diesem Handbuch verwendete Symbole



WARNUNG!

Kennzeichnet eine drohende Gefahr. Die Nichtbeachtung dieser Warnung kann zum Tod oder zu schweren Verletzungen führen.



VORSICHT!

Kennzeichnet eine möglicherweise gefährliche Situation. Die Nichtbeachtung dieser Warnung kann zu leichten Verletzungen oder Sachschäden führen.



ANMERKUNG

Kennzeichnet Anwendungstipps und wichtige Informationen.

Symbole auf dem Elektrowerkzeug

V Volts

/min Drehzahl



Um die Verletzungsgefahr zu verringern, lesen Sie die Betriebsanleitung!



Entsorgungshinweise für Altgeräte (siehe Seite 12)!

Zu Ihrer Sicherheit



WARNUNG!

Lesen Sie folgende Informationen vor dem Gebrauch des Elektrowerkzeugs:

- die vorliegende Betriebsanleitung
- die „Allgemeinen Sicherheitshinweise“ zur Handhabung von Elektrowerkzeugen im beiliegenden Heft (Broschüre-Nr.: 315.915),
- die aktuell gültigen Betriebsvorschriften und die Unfallverhütungsvorschriften

Dieses Elektrowerkzeug befindet sich auf dem neuesten Stand der Technik und wurde in Übereinstimmung mit den anerkannten Sicherheitsvorschriften konstruiert. Dennoch kann das Elektrowerkzeug während

der Verwendung eine Gefahr für das Leben und die Gesundheit des Benutzers oder eines Dritten darstellen oder das Elektrowerkzeug oder andere Gegenstände können beschädigt werden.

Der Akku-Schlagschrauber darf nur

- bestimmungsgemäß und
- in einwandfreiem Zustand verwendet werden.

Mängel, die die Sicherheit beeinträchtigen, müssen unverzüglich behoben werden.

Bestimmungsgemäße Verwendung

Der Akku-Schlagschrauber ist für folgende Zwecke vorgesehen:

- für den gewerblichen Einsatz in Industrie und Handwerk,
- zum Befestigen und Lösen von Schrauben, Muttern und diversen Befestigungsmitteln mit Gewinde

Sicherheitshinweise für Schlagschrauber



WARNUNG!

Beachten Sie alle Warnhinweise, Anweisungen, Abbildungen und technischen Daten, die diesem Elektrowerkzeug beigelegt sind. Die Nichtbeachtung der unten aufgeführten Anweisungen kann zu Stromschlägen, Bränden und/oder schweren Verletzungen führen. Bewahren Sie alle Warn- und Bedienungshinweise für Nachschlagewecke auf.

- **Halten Sie das Elektrowerkzeug an den isolierten Griffflächen fest, wenn Arbeiten ausgeführt werden, bei denen das Befestigungsmittel verdeckte Leitungen oder das eigene Netzkabel treffen kann.** Wenn das Befestigungsmittel auf eine Strom führende Leitung trifft, werden auch die frei liegenden Metallteile des Elektrowerkzeugs leitend. Dadurch besteht für den Bediener Stromschlaggefahr.

Geräuschpegel und Schwingungen

Die Geräusch- und Vibrationswerte wurden gemäß EN 62841 ermittelt.

Der mit A bewertete Geräuschpegel des Elektrowerkzeugs beträgt normalerweise:

- Schalldruckpegel L_{pA} : 87,0 dB(A)
 - Schalleistungspegel L_{WA} : 98,0 dB(A)
 - Unsicherheit: K = 3 dB
- Vibrationsgesamtwert:
- Emissionswert a_h : 17,88 m/s^2
 - Unsicherheit: K = 1,5 m/s^2

**VORSICHT!**

Die angegebenen Messwerte beziehen sich auf neue Elektrowerkzeuge. Durch den täglichen Gebrauch ändern sich die Geräusch- und Schwingungswerte.

**ANMERKUNG**

Der in diesem Informationsblatt angegebene Schwingungsemissionspegel wurde nach einer genormten Prüfung gemäß EN 62841 gemessen und kann zum Vergleich eines Werkzeugs mit einem anderen verwendet werden.

Er kann für eine vorläufige Expositionsbewertung verwendet werden. Der angegebene Schwingungsemissionswert gilt für die Hauptanwendungen des Werkzeugs.

Wird das Werkzeug jedoch für andere Anwendungen, mit anderem Zubehör oder schlechter Wartung eingesetzt, kann die Schwingungsemission abweichen.

Dies kann die Belastung über die gesamte Arbeitsdauer hinweg deutlich erhöhen.

Zur Einschätzung der genauen Schwingungsexposition müssen auch die Zeiten berücksichtigt werden, zu denen das Werkzeug ausgeschaltet oder lastfrei in Betrieb ist.

Dies kann den Expositionswert über die gesamte Arbeitsdauer hinweg deutlich verringern.

Stellen Sie fest, mit welchen weiteren Sicherheitsmaßnahmen der Bediener vor den Vibrationsauswirkungen geschützt werden kann, z. B. durch Wartung des Werkzeugs und des Zubehörs, Warmhalten der Hände, Organisation von Arbeitsabläufen.

**VORSICHT!**

Tragen Sie bei einem Schalldruck über 85 dB(A) einen Gehörschutz.

Technische Daten

Tool		IW 1/2" 750 18.0-EC	
Typ		Schlagschrauber	
Nennspannung	V DC	18	
Leerlaufdrehzahl	r.p.m	0-500/0-1300/ 0-2300	
Max. Schlagzahl	bpm	2800	
Maximales Drehmoment	N	750	
Gewicht nach "EPTA Procedure 01/2003" (ohne Akku)	kg	1,9	
Akku	18 V	AP 18.0/2.5 AP 18.0/5.0 AP 18.0/8.0	
Gewicht des Akkus	kg	AP 18.0/2.5 AP 18.0/5.0 AP 18.0/8.0	0,4 0,7 1,1
Betriebs-temperatur	-10~40°C		
Lager-temperatur	< 50°C		
Lade-temperatur	4 - 40 °C		
Ladegerät	CA 10.8/18.0, CA 18.0-LD		

Übersicht (siehe Abbildung A)

Die Nummerierung der Produkteigenschaften bezieht sich auf die Seite mit der Geräteabbildung.

- 1 1/2" Vierkantantrieb**
- 2 Variabler Drehzahlwählschalter**
- 3 Drehzahlanzeige**
- 4 LED-Lampe**
- 5 Richtungsschalter (Rechtslauf/verriegelte Mittelstellung/Linkslauf)**
- 6 Riemenbefestigung**

Zum Anbringen eines Handgelenkriemens (nicht im Lieferumfang enthalten), der das Werkzeug vor dem Herunterfallen sichert.

- 7 Gürtelclip
- 8 Öffnung
- 9 Befestigungsschraube

Bedienung

WARNUNG!

Entfernen Sie den Akku, bevor Sie Arbeiten am Elektrowerkzeug durchführen.

Vor dem Einschalten des Elektrowerkzeugs

Packen Sie den Akku-Schlagschrauber aus und überprüfen Sie, ob Teile fehlen oder beschädigt sind.

ANMERKUNG

Die Akkus sind bei Auslieferung nicht vollständig geladen. Laden Sie die Akkus vor der ersten Inbetriebnahme vollständig auf. Siehe Bedienungsanleitung des Ladegeräts.

Einsetzen/Wechseln des Akkus

- Schieben Sie den aufgeladenen Akku in das Elektrowerkzeug, bis er hörbar einrastet (siehe Abbildung B).
- Zum Entfernen drücken Sie die Entriegelungstaste und ziehen den Akku heraus (siehe Abbildung C).

VORSICHT!

Wenn das Gerät nicht in Gebrauch ist, schützen Sie die Akkukontakte. Lose Metallteile können die Kontakte kurzschließen. Dadurch besteht Explosions- und Brandgefahr!

Abnehmbarer Gürtelclip

Das Gerät ist mit einem abnehmbaren Gürtelclip ausgestattet, der zum bequemen Transport auf der Seite des Geräts angebracht werden kann.

- Nehmen Sie den Akku aus dem Gerät.
- Lassen Sie die Feder und die Öffnung des Gürtelclips 7 mit der Öffnung 8 und der Gewindeaufnahme am Boden des Geräts fluchten (siehe Abb. D).
- Setzen Sie die Schraube 9 ein und ziehen Sie die Schraube mit einem Schraubendreher (nicht mitgeliefert) fest.

Befestigung des Riemens

- Dient zum Anbringen eines Handgelenkriemens (nicht im

Lieferumfang enthalten), um die Gefahr zu verringern, dass das Werkzeug herunterfällt. Legen Sie den Riemen beim Transportieren des Geräts um die Hand (siehe Abbildung E).

Anbringen und Entfernen der Kraftstecknuss (siehe Abb. F)

VORSICHT!

Bewegen Sie den Richtungsschalter 5 in die mittlere Position, bevor Sie Arbeiten am Elektrowerkzeug verrichten.

Stellen Sie sicher, dass die Kraftstecknuss und das Befestigungsteil nicht beschädigt sind, bevor Sie die Kraftstecknuss anbringen.

- Richten Sie den Vierkant der Kraftstecknuss am Vierkantantrieb 1 aus und schieben Sie die Kraftstecknuss bis zum Anschlag auf den Vierkantantrieb.
- Klopfen Sie bei Bedarf leicht darauf.
- Ziehen Sie die Kraftstecknuss zum Entfernen einfach ab.

WARNUNG!

Die Kraftstecknuss kann nach längerem Gebrauch heiß sein. Verwenden Sie Schutzhandschuhe, wenn Sie die Kraftstecknuss vom Werkzeug entfernen, oder lassen Sie die Kraftstecknuss zuerst abkühlen.

Richtungsvorwahl (siehe Abbildung G)

VORSICHT!

Zum Ändern der Drehrichtung muss das Elektrowerkzeug gestoppt sein.

Stellen Sie den Richtungsschalter 5 auf die gewünschte Position:

- Um Schrauben oder Muttern festzuziehen, stellen Sie den Richtungsschalter ganz nach links
- Um Schrauben oder Muttern zu lösen, stellen Sie den Richtungsschalter ganz nach rechts.
- Um die Gefahr eines versehentlichen Anlaufs bei Nichtgebrauch zu verringern, stellen Sie den Richtungsschalter auf „OFF“ (mittlere Verriegelungsposition).

ANMERKUNG

Der Schlagschrauber läuft nur, wenn der Richtungsschalter ganz links oder rechts eingerastet ist.

⚠️ WARNUNG!
Akkubetriebene Werkzeuge sind immer in betriebsbereitem Zustand. Daher sollte der Richtungsschalter immer in der Mittelstellung verriegelt sein, wenn das Werkzeug nicht verwendet wird oder wenn Sie es an Ihrer Seite tragen.

Modusauswahl (siehe Abbildung H)

⚠️ VORSICHT!
 Ihr Werkzeug ist mit einem Drehzahlbedienfeld 3 ausgestattet, das sich am Fuß des Werkzeugs befindet und aus der Antriebs-Steuertaste - Taste „A“ - und LED-Anzeigen für die Arbeitsmodus besteht.

Mit der Antriebs-Steuertaste kann zwischen drei Betriebsarten ausgewählt werden: Drehmoment regeln, Drehzahl (U/min) regeln und Schlaggeschwindigkeit (IPM) für einen Einsatzzweck einstellen. Die Betriebsarten 1, 2 und 3 sind die einzigen Modi, bei denen die Drehzahl mit dem variablen Drehzahlwählschalter reguliert wird.

Auswahl der Antriebs-Steuerefunktion:

- Stelle Sie zunächst fest, welche Betriebsart aktiv ist. Dazu drücken Sie entweder den Hauptschalter und lassen Sie ihn wieder los, oder Sie drücken die Antriebs-Steuertaste oder den „A“ Schalter direkt ohne den Hauptschalter zu betätigen. Die LED-Anzeige unter der Modusnummer

- leuchtet auf, um die derzeit aktive Betriebsart anzuzeigen.
- Drücken Sie kurz die Antriebs-Steuertaste (kürzer als 0,5 Sekunden), um zwischen den 3 Betriebsarten umzuschalten. Die Drehmomentstufe wechselt mit jedem Tastendruck. Weitere Einzelheiten finden Sie in der folgenden Tabelle.

„A“ ist ein spezieller Modus, der sowohl mit Rechtslauf zum Anziehen der Schrauben oder Muttern als auch mit Linkslauf zum Lösen der Schrauben oder Muttern verwendet werden kann.



- Rechtslauf: Automatischer Schrauben-Stopp-Modus; das Werkzeug stoppt nach einigen Umdrehungen, um ein zu festes Anziehen zu vermeiden.
- Linkslauf: Schrauben-Entfernungsmodus; das Werkzeug stoppt automatisch, sobald es die Schraube/Mutter gelöst hat.

„A“-Modus auswählen:

- Stellen Sie fest, welche Betriebsart aktiviert ist:

Entweder Sie drücken den Hauptschalter und lassen Sie ihn wieder los, oder Sie drücken die Antriebs-Steuertaste oder den „A“ Schalter direkt ohne den Hauptschalter zu betätigen. Die LED-Anzeige neben der Taste „A“ leuchtet auf, um die aktuelle Modus-Einstellung anzuzeigen. Weitere Einzelheiten finden Sie in der folgenden Tabelle:

Rechtslauf

LED-Anzeige im Bedienfeld	Arbeitsmodus	Anwendung
	1	Fein abgestimmtes Anziehen von kleinen Schrauben und Muttern.
	2	Beim Anziehen ist das Drehmoment moderat.
	3	Beim Anziehen ist das Drehmoment maximal.

	A	Anziehen mit automatischem Stopp.
--	---	-----------------------------------

Linkslauf

LED-Anzeige im Bedienfeld	Arbeitsmodus	Anwendung
	1	Fein abgestimmtes Lösen kleiner Schrauben und Muttern.
	2	Beim Lösen ist das Drehmoment moderat.
	3	Beim Lösen ist das Drehmoment maximal.
	A	Lösen mit automatischem Stopp.

 EIN  AUS

WARNUNG!

Ändern Sie den Arbeitsmodus bei laufendem Werkzeug nicht. Eine plötzliche Änderung des Drehmoments kann zu einem Kontrollverlust führen und Verletzungen oder Schäden am Werkzeug oder Werkstück verursachen.

NOTE

The variety of wood density and metal material may affect the final outcome. The user should select appropriate mode based on the application.

NOTE

The LED indicator will turn off approximately 1min after the trigger switch is released.

NOTE

When the tool is next turned on, the working mode will revert to the previous setting.

Switching on the power tool (see figure I)

- To switch the power tool on: Press the trigger switch 2.

The variable-speed trigger switch delivers higher speed with increased trigger pressure and lower speed with decreased trigger pressure.

- To switch the power tool off: Release the trigger switch.

LED light (see figure J)

- The LED light will automatically turn on with a slight squeeze on the variable-speed trigger switch before the tool starts running and will turn off approximately 10 seconds after the variable speed trigger switch is released.
- The LED light will rapidly flash when the tool and/or battery pack becomes overloaded or too hot, and the internal sensors will turn the tool off. Rest the tool

for a while or place the tool and battery pack separately under air flow to cool them.

- The LED light will flash more slowly to indicate that the battery is at low-battery capacity. Recharge the battery pack.
- If the LED fails to light up when you switch on the tool, or it turns off suddenly during your operation, it may be caused by the internal communication error. Please contact customer service or an authorized service center for assistance.



ANMERKUNG

Das Endergebnis hängt von der jeweiligen Holzdicke und dem Metallwerkstoff ab. Die Wahl der richtigen Betriebsart hängt vom jeweiligen Anwendungszweck ab.



ANMERKUNG

Die LED-Anzeige erlischt etwa 1 Minute nach dem Loslassen des Hauptschalters.



ANMERKUNG

Beim nächsten Einschalten des Werkzeugs wird die vorherige Einstellung wieder aktiviert.

Elektrowerkzeug einschalten (siehe Abbildung I)

- Zum Einschalten des Elektrowerkzeugs: Drücken Sie den Auslöseschalter 2.

Je stärker der Hauptschalter mit der variablen Drehzahlverstellung betätigt wird, desto höher ist die Drehzahl. Dementsprechend verringert sich die Drehzahl bei nachlassendem Druck des Hauptschalters.

- Zum Ausschalten des Elektrowerkzeugs: Lassen Sie den Ein-/Ausschalter los.

LED-Licht (siehe Abbildung J)

- Durch leichten Druck auf den variablen Drehzahl-Hauptschalter schaltet sich das LED-Licht automatisch ein, bevor das Werkzeug anläuft. Etwa 10 Sekunden nach dem Loslassen des Hauptschalters erlischt die Lampe wieder.
- Bei einer Überlastung oder Überhitzung des Werkzeugs oder des Akkus blinkt die LED-Lampe schnell und das Werkzeug wird von den internen Sensoren abgeschaltet. Lassen Sie das Werkzeug eine Zeit lang ruhen oder legen Sie das Gerät und den Akku zum Kühlen in einen gut belüfteten

Bereich ab.

- Wenn der Akku nur noch wenig Kapazität hat, blinkt die LED-Lampe langsam. Laden Sie den Akku auf.
- Wenn die LED beim Einschalten des Geräts nicht aufleuchtet oder sich während des Betriebs plötzlich ausschaltet, kann dies an einem internen Kommunikationsfehler liegen. Lassen Sie das Gerät beim Kundendienst oder einer autorisierten Servicewerkstatt reparieren.

Schrauben und Muttern festziehen und lösen (siehe Abbildung K)

Muttern und Schrauben festziehen

Verwenden Sie den zur Mutter oder Schraube passenden Innensechskant. Wählen Sie je nach Typ oder Größe der Schraube und Mutter einen geeigneten Arbeitsmodus oder den „A“-Modus. Führen Sie vor Beginn Ihrer Arbeit immer einen Probelauf durch, um die richtige Befestigungszeit für Ihre Schraube oder Mutter zu ermitteln. Um herauszufinden, welche Betriebsart am geeignetsten ist, sollte ein Probelauf an Ausschussmaterial durchgeführt werden.

- Stellen Sie den Richtungsschalter in die Rechtslauf-Stellung.
- Halten Sie das Werkzeug fest und setzen Sie die Stecknuss über die Schraube oder Mutter. Stellen Sie sicher, dass die gesamte Länge des Schraubenkopfes oder der Mutter vollständig in die Stecknuss eingreift.
- Drücken Sie den variablen Drehzahlwählschalter, um den Schlagschrauber einzuschalten. Beginnen Sie langsam und erhöhen Sie die Drehzahl, während die Mutter oder Schraube sich nach unten bewegt. Ziehen Sie die Mutter oder Schraube bündig fest, indem Sie das Werkzeug bis zum Stillstand verlangsamen. Wenn diese Vorgehensweise nicht beachtet wird, neigt das Werkzeug dazu, sich in der Hand zu drehen oder zu verdrehen, sobald die Mutter oder Schraube fest sitzt.
- Ziehen Sie die Schraube oder Mutter mit dem richtigen Drehmoment an.

- Überprüfen Sie nach dem Anziehen immer das Drehmoment mit einem Drehmomentschlüssel. Wenn die Befestigungselemente zu fest sitzen, verringern Sie die Schlagzeit. Wenn sie nicht fest genug angezogen sind, erhöhen Sie die Schlagzeit.

HINWEIS:

- Halten Sie das Werkzeug gerade entlang der Achse der Schraube oder Mutter.
- Ein zu hohes Anzugsdrehmoment kann die Schraube/Mutter oder die Stecknuss beschädigen.

Muttern und Schrauben lösen

Verwenden Sie je nach Anwendung entweder Modus 1, 2, 3 oder Modus „A“, um Muttern und Schrauben zu lösen.

Um zu verhindern, dass die gelösten Befestigungselemente bei Arbeiten über Kopf oder an Autoreifen auf den Boden oder an eine schwer zugängliche Stelle fallen, wird empfohlen, für diese Arbeit den Modus „A“ zu verwenden.

- Stellen Sie den Richtungsschalter in die Linkslauf-Stellung.
- Halten Sie das Werkzeug fest und setzen Sie die Stecknuss über die Schraube oder Mutter. Stellen Sie sicher, dass die gesamte Länge des Schraubenkopfes oder der Mutter vollständig in die Stecknuss greift.
- Drücken Sie den variablen Drehzahlwählschalter, um den Schlagschrauber einzuschalten. Sobald das Befestigungselement locker ist, hört das Werkzeug auf zu laufen. Mit diesem Werkzeug können Sie bei Bedarf auch den Ein-/Ausschalter gedrückt halten, um die Mutter von der langen Schraube zu entfernen.

Wartung und Pflege

WARNUNG!

Entfernen Sie den Akku, bevor Sie Arbeiten am Elektrowerkzeug durchführen.

Reinigung

- Reinigen Sie das Elektrowerkzeug und das Gitter vor den Lüftungsschlitzen regelmäßig. Die Häufigkeit der Reinigung ist abhängig von Material und Einsatzdauer.

- Den Gehäuseinnenraum und den Motor regelmäßig mit trockener Druckluft ausblasen.

Ersatzteile und Zubehör

Weiteres Zubehör, insbesondere Werkzeuge und Poliermittel, finden Sie in den Katalogen des Herstellers.

Explosionszeichnungen und Ersatzteillisten finden Sie auf unserer Homepage:

www.flex-tools.com

Entsorgungshinweise



WARNUNG!

Machen Sie Elektrowerkzeuge, die nicht mehr verwendet werden, unbrauchbar:

- *Netzbetriebene Elektrowerkzeuge durch Abtrennen des Netzkabels,*
- *akkubetriebene Elektrowerkzeuge durch Entfernen des Akkus.*



Nur für EU-Länder
Elektrowerkzeuge nicht in den
Hausmüll werfen!

Gemäß der EU-Richtlinie 2012/19/EG über Elektro- und Elektronik-Altgeräte und deren Umsetzung in nationales Recht müssen gebrauchte Elektrowerkzeuge getrennt gesammelt und umweltfreundlich recycelt werden.



Rohstoffrückgewinnung anstatt Abfallentsorgung.

Geräte, Zubehör und Verpackungen sollten umweltfreundlich recycelt werden. Kunststoffteile werden je nach Materialart für das Recycling gekennzeichnet.



WARNUNG!

Akkus/Batterien weder im Hausmüll entsorgen noch ins Feuer oder Wasser werfen. Altbatterien/Akkus nicht öffnen.

Nur für EU-Länder:

Gemäß der Richtlinie 2006/66/EG müssen defekte oder Alt-Batterien/Akkus recycelt werden.



ANMERKUNG

Über entsprechende Entsorgungsmöglichkeiten gibt der Fachhandel Auskunft!

Symbols used in this manual

 **WARNING!**
Denotes impending danger. Non-observance of this warning may result in death or extremely severe injuries.

 **CAUTION!**
Denotes a possibly dangerous situation. Non-observance of this warning may result in slight injury or damage to property.

 **NOTE**
Denotes application tips and important information.

Symbols on the power tool

V Volts

/min Rotation rate



To reduce the risk of injury, read the operating instructions!



Disposal information for the old machine (see page 19)!

For your safety

 **WARNING!**
Before using the power tool, please read the following:

- these operating instructions,
- the “General safety instructions” on the handling of power tools in the enclosed booklet (leaflet-no.: 315.915),
- the currently valid site rules and the regulations for the prevention of accidents.

This power tool is state of the art and has been constructed in accordance with the acknowledged safety regulations. Nevertheless, when in use, the power tool may be a danger to life and limb of the user or a third party, or the power tool or other property may be damaged.

The cordless impact wrench may be used only

- as intended,
- in perfect working order.

Faults which impair safety must be repaired immediately.

Intended use

The cordless impact wrench is intended

- for commercial use in industry and trade,
- for fastening and loosening of bolts, nuts and various threaded fasteners.

Safety instructions for impact wrench

 **WARNING!**
Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

- **Hold power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring or its own cord.** Fasteners contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.

Noise and vibration

The noise and vibration values have been determined in accordance with EN 62841. The A evaluated noise level of the power tool is typically:

- Sound pressure level L_{pA} : 87,0 dB(A)
- Sound power level L_{WA} : 98,0 dB(A)
- Uncertainty: K = 3 dB

Total vibration value:

- Emission value a_h : 17,88 m/s²
- Uncertainty: K = 1.5 m/s²

 **CAUTION!**
The indicated measurements refer to new power tools. Daily use causes the noise and vibration values to change.

 **NOTE**
The vibration emission level given in this information sheet has been measured in accordance with a measurement method standardized in EN 62841 and may be used to compare one tool with another.

It may be used for a preliminary assessment of exposure. The specified vibration emission level represents the main applications of the tool.

However, if the tool is used for different applications, with different cutting accessories or poorly maintained, the vibration emission level may differ.

This may significantly increase the exposure level over the total working period.

To make an accurate estimation of the vibration exposure level, it is also necessary to take into account the times when the tool is switched off or running but not actually in use.

This may significantly decrease the exposure level over the total working period.

Identify additional safety measures to protect the operator from the effects of vibration such as: maintain the tool and the cutting accessories, keep the hands warm, organization of work patterns.



CAUTION!

Wear ear defenders at a sound pressure above 85 dB(A).

Technical data

Tool		IW 1/2" 750 18.0-EC	
Type		Impact Wrench	
Rated voltage	Vdc	18	
No-load speed	r.p.m	0-500/0-1300/ 0-2300	
Max. impact rate	bpm	2800	
Max torque	N	750	
Weight according to "EPTA Procedure 01/2003" (without battery)	kg	1.9	
Battery	18V	AP 18.0/2.5 AP 18.0/5.0 AP 18.0/8.0	
Weight of battery	kg	AP 18.0/2.5 AP 18.0/5.0 AP 18.0/8.0	0.4 0.7 1.1
Working temperature	-10~40°C		
Storage temperature	< 50°C		

Charging temperature	4~40°C
Charger	CA 10.8/18.0, CA 18.0-LD

Overview (see figure A)

The numbering of the product features refers to the illustration of the machine on the graphics page.

- 1 1/2" Square drive**
- 2 Variable-speed trigger switch**
- 3 Speed control panel**
- 4 LED light**
- 5 Direction preselector switch (forward / center-lock / reverse)**
- 6 Strap fixing**
For attaching a wrist strap (not included) in order to reduce the chances of dropping your tool.
- 7 Belt clip**
- 8 Opening**
- 9 Fastening screw**

Operating instructions



WARNING!

Remove the battery before carrying out any work on the power tool.

Before switching on the power tool

Unpack the cordless impact wrench and check that here are no missing or damaged parts.



NOTE

The batteries are not fully charged on delivery. Prior to initial operation, charge the batteries fully. Refer to the charger operating manual.

Inserting/replacing the battery

- Press the charged battery into the power tool until it clicks into place (see figure B).
- To remove, press the release button and pull out the battery (see figure C).

CAUTION!

When the device is not in use, protect the battery contacts. Loose metal parts may short circuit the contacts; explosion and fire hazard!

Removable belt clip

Your tool is equipped with a removable belt clip that can be positioned on the side of the tool for convenient transport.

- Remove the battery pack from the tool.
- Align the rib and the hole of the belt clip 7 with the opening 8 and the threaded hole on the base of the tool. (see figure D).
- Insert the fastening screw 9 and securely tighten the screw with a screwdriver (not included).

Strap fixing

- Strap fixing is provided to attach a wrist strap (not included) in order to reduce the chances of dropping your tool. Wrap the strip around your hand when carrying the tool (see figure E).

Install and remove the impact socket (see figure F)**CAUTION!**

Before carrying out any work on the power tool, move the direction preselector switch 5 to the middle position.

Make sure that the impact socket and the mounting portion are not damaged before installing the impact socket.

- Align the square of the impact socket with the square drive 1 and push the impact socket onto the square drive as far as it will go.
- Tap it lightly if required.
- To remove the impact socket, simply pull it off.

WARNING!

The impact socket may be hot after prolonged use. Use protective gloves when removing the impact socket from the tool, or first allow the impact socket to cool down.

Direction preselection (see figure G)**CAUTION!**

Change the direction of rotation only when the power tool is stopped.

Move the direction preselector switch 5 to the required position:

- Position the direction preselector switch to the far left of the tool to tighten bolts/nuts

- Position the direction preselector switch to the far right of the tool to loosen bolts/nuts.
- Position the direction preselector switch in the "OFF" (center-lock) position to help reduce the possibility of accidental starting when not in use.

NOTE

The impact wrench will not run unless the direction preselector switch is engaged fully to the left or to the right.

WARNING!

Battery tools are always in operating condition. Therefore, the direction preselector switch should always be locked in the center position when the tool is not in use or when carrying it at your side.

Mode selection (see figure H)**CAUTION!**

Your tool is equipped with a speed control panel 3, located on the foot of the tool. It consists of the drive-control button, the "A" button, and LED indicators for working modes.

The drive-control button is used to select among three modes to adjust the torque, rotation-speed (RPM), and impact-speed (IPM) setting for an application. The modes 1, 2, and 3 are the only modes where the speed is controlled by the variable-speed trigger switch.

To select the drive control mode:

- First, check the active mode. Either depress and release the trigger switch or press the drive control button or "A" button directly without touching the trigger switch. The LED indicator below the mode number will illuminate to indicate the active mode setting.
- Press the drive-control button briefly (less than 0.5 second) to cycle through the 3 modes. Each press changes one torque level. See more details in the chart below.

"A" is a special mode, that is designed to be used both with forward rotation for tightening the bolts or nuts and reverse rotation for loosening the bolts or nuts.

- Forward: bolt auto stop mode; the tool stops after applying a number of impacts to avoid fasten too tightly.



- Reverse: bolt removal mode; the tool stops automatically as soon as it has loosened the bolt/nut. or press the drive-control button or the "A" button directly without touching the trigger switch.

To select the "A" mode:

- check the active mode:
Either depress and release the trigger switch

The LED indicator beside the "A" button will illuminate to indicate the current mode setting. See more details in chart below:

Forward Rotation

LED indicator displayed on panel	Working Mode	Application
	1	Fine-tuned tightening of small bolts and nuts.
	2	When tightening, the torque is moderate.
	3	When tightening, the torque is maximum.
	A	Tightening with automatic stop.

Reverse Rotation

LED indicator displayed on panel	Working Mode	Application
	1	Fine-tuned loosening of small bolts and nuts.
	2	When loosening, the torque is moderate.
	3	When loosening, the torque is maximum.
	A	Loosening with automatic stop.



⚠ WARNING!

Do not change the working mode while the tool is running. Sudden change of torque may cause the loss of control causing possible injury or damage to the tool or workpiece.

i NOTE

The variety of wood density and metal material may affect the final outcome. The user should select appropriate mode based on the application.

i NOTE

The LED indicator will turn off approximately 1 min after the trigger switch is released.

i NOTE

When the tool is next turned on, the working mode will revert to the previous setting.

Switching on the power tool (see figure I)

- To switch the power tool on: Press the trigger switch 2.

The variable-speed trigger switch delivers higher speed with increased trigger pressure and lower speed with decreased trigger pressure.

- To switch the power tool off: Release the trigger switch.

LED light (see figure J)

- The LED light will automatically turn on with a slight squeeze on the variable-speed trigger switch before the tool starts running and will turn off approximately 10 seconds after the variable speed trigger switch is released.
- The LED light will rapidly flash when the tool and/or battery pack becomes overloaded or too hot, and the internal sensors will turn the tool off. Rest the tool for a while or place the tool and battery pack separately under air flow to cool them.
- The LED light will flash more slowly to indicate that the battery is at low-battery capacity. Recharge the battery pack.
- If the LED fails to light up when you switch on the tool, or it turns off suddenly during your operation, it may be caused by the internal communication error. Please contact customer service or an authorized service center for assistance.

Tighten and loosen nuts and bolts (see figure K)**To tighten nuts and bolts**

Use the hex socket that matches the nut or bolt. Select a proper working mode or "A" mode depending on the type or size of the bolt and nut. Before starting your job, always perform a test operation to determine the proper fastening time for your bolt or nut. It is advisable to perform a trial run on a scrap material to determine the best mode selection.

- Set the direction preselector switch to forward setting.
- Hold the tool firmly and place the socket over the bolt or nut. Ensure that full length of the bolt head or nut is fully engaged into socket.
- Depress the variable-speed trigger switch to turn the impact wrench on. Start slowly, increasing the speed as the nut or bolt runs down. Set the nut or bolt snugly by slowing the tool to a stop. If this procedure is not followed, the tool will have a tendency to torque or twist in your hand when the nut or bolt seats.
- Fasten the bolt or nut to the proper torque.
- After fastening, always check the torque with a torque wrench. If the fasteners are too tight, reduce the impacting time. If they are not tight enough, increase the impacting time.

NOTICE:

- Hold the tool straight along the axis of the bolt or nut.
- Excessive fastening torque may damage the bolt/nut or socket.

To loosen nuts and bolts

Use either mode 1, 2, 3 or "A" mode to loosen nuts and bolts depending on the application.

When working overhead or working on car tires, to prevent the loosened fasteners from falling to the ground or into a tight space, it is recommended to use the "A" mode to do this job.

- Set the direction preselector switch to reverse setting.
- Hold the tool firmly and place the socket over the bolt or nut. Ensure that full length

of the bolt head or nut is fully engaged into socket.

- Depress the variable-speed trigger switch to turn the impact wrench on. Once the fastener is loose, the tool will stop running. This tool also allows you to continue to depress the trigger switch for removing the nut from the long bolt, if necessary.

Maintenance and care



WARNING!

Remove the battery before carrying out any work on the power tool.

Cleaning

- Clean the power tool and grille in front of the vent slots regularly. Frequency of cleaning is dependent on the material and duration of use.
- Regularly blow out the housing interior and motor with dry compressed air.

Spare parts and accessories

For other accessories, in particular tools and polishing aids, see the manufacturer's catalogues.

Exploded drawings and spare-part lists can be found on our homepage:

www.flex-tools.com

Disposal information



WARNING!

Render redundant power tools unusable:

- *mains operated power tool by removing the power cord,*
- *battery operated power tool by removing the battery.*



EU countries only
Do not throw electric power tools into the household waste!

In accordance with the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment and transposition into national law used electric power tools must be collected separately and recycled in an environmentally friendly manner.



Raw material recovery instead of waste disposal.

Device, accessories and packaging should be recycled in an environmentally friendly

manner. Plastic parts are identified for recycling according to material type.



WARNING!

Do not throw batteries into the household waste, fire or water. Do not open used batteries.

EU countries only:

In accordance with Directive 2006/66/EC defective or used batteries must be recycled.



NOTE

Please ask your dealer about disposal options!

CE-Declaration of conformity

We declare on our sole responsibility that the product described in "Technical specifications" conforms to the following standards or normative documents:

EN 62841 in accordance with the regulations of the directives 2014/30/EU, 2006/42/EC, 2011/65/EU.

Responsible for technical documents:

FLEX-Elektrowerkzeuge GmbH, R & D

Bahnhofstrasse 15, D-71711 Steinheim/Murr

i.v.  

Peter Lameli
Technical Head

Klaus Peter Weinper
Head of Quality
Department (QD)

15.06.2022; FLEX-Elektrowerkzeuge GmbH
Bahnhofstrasse 15, D-71711 Steinheim/Murr

UK CA Declaration of Conformity

We as the manufacturer: **FLEX Elektrowerkzeuge GmbH**, Business address: **Bahnhofstr. 15, 71711 Steinheim, Germany** declare under our sole responsibility, that the product(s) described under „Technical specifications“ fulfills all the relevant provisions of **The Supply of Machinery (Safety) Regulations** S.I. 2008/1597 and also fulfills all the relevant provisions of the following UK Regulations:

Electromagnetic Compatibility Regulations S.I. 2016/1091, **The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations** S.I. 2012/3032 and are manufactured in accordance with the following designated Standards:

BS EN 62841-1:2015,
BS EN 62841-2-2:2014,
BS EN 55014-1:2017,
BS EN 55014-2:2015

Place of declaration: **Steinheim, Germany.**
 Responsible person: **Peter Lameli, Technical Director - FLEX-Elektrowerkzeuge GmbH**
 Contact details for Great Britain: FLEX Power Tools Limited, Unit 8 Anglo Office Park, Lincoln Road, HP 12, 3RH Buckinghamshire, United Kingdom.



Peter Lameli
 Technical Head

Klaus Peter Weinper
 Head of Quality
 Department (QD)

15.06.2022

Exemption from liability

The manufacturer and his representative are not liable for any damage and lost profit due to interruption in business caused by the product or by an unusable product.

The manufacturer and his representative are not liable for any damage which was caused by improper use of the product or by use of the product with products from other manufacturers.

Flex-Elektrowerkzeuge GmbH
Bahnhofstr. 15 71711 Steinheim/Murr
Tel. +49(0) 7144 828-0
Fax +49(0) 7144 25899
info@flex-tools.com
www.flex-tools.com
